

NLS-FR2080 Good Read Beep



@SETUPE1

Enter Setup



@GRBENA1

**** On**



@GRBENA0

Off



@SETUPE0

**** Exit Setup**